



NEXIQ Blue-Link™ Quick Start Guide

- Pairing the NEXIQ Blue-Link with Your iOS Device
- Pairing the NEXIQ Blue-Link with your Android Device

This *Quick Start Guide* provides instructions for pairing the NEXIQ Blue-Link with both iOS and Android devices.

Note: For technical support, please call **(800) 639-6774**.

NEXIQ Technologies is a registered trademark and Blue-Link is a trademark of IDSC Holdings LLC. ©2017 IDSC Holdings LLC. All rights reserved.

Pairing the NEXIQ Blue-Link™ with Your iOS Device

To pair the NEXIQ Blue-Link with your iOS device:

1. Plug the NEXIQ Blue-Link into the vehicle's diagnostic connector.
2. Press the button on the front of the NEXIQ Blue-Link.




The green light below the button is now flashing, indicating that the NEXIQ Blue-Link is now discoverable.

3. Touch the **Settings** icon  on your iOS device.
4. Touch  **Bluetooth** to navigate to the Bluetooth menu.
5. Make sure that the Bluetooth setting is turned **On**.

6. Under **OTHER DEVICES**, locate your NEXIQ Blue-Link device (e.g., BL_XXX, where XXX is the serial number of the NEXIQ Blue-Link).

7. Select the device to begin the pairing process.
Your NEXIQ Blue-Link is now listed under **MY DEVICES** with a status of **Connected**.

8. To disconnect, do one of the following:

- Touch the Information icon  to the right of the status; then select **Disconnect**.

or

- Unplug the NEXIQ Blue-Link from the vehicle's diagnostic connector.


Pairing the NEXIQ Blue-Link™ with Your Android Device

To pair the NEXIQ Blue-Link with your Android device:

1. Plug the NEXIQ Blue-Link into the vehicle's diagnostic connector.
2. Press the button on the front of the NEXIQ Blue-Link.



The green light below the button is now flashing, indicating that the NEXIQ Blue-Link is now discoverable.

3. Select the **App Drawer**  on your Android device.
4. Select **Settings** .
5. Under **Wireless & networks**, select **Bluetooth**.


6. Make sure that the Bluetooth setting is turned **On**.

7. Under **Available devices**, locate your NEXIQ Blue-Link device (e.g., BL_XXX, where XXX is the serial number of the NEXIQ Blue-Link).

8. Select the device to begin the pairing process.

Your NEXIQ Blue-Link is now listed under **Paired devices**.

9. Do one of the following:

- Touch the gear icon  to the right of the status; then select **Forget**.

or

- Unplug the NEXIQ Blue-Link from the vehicle's diagnostic connector to disconnect.